

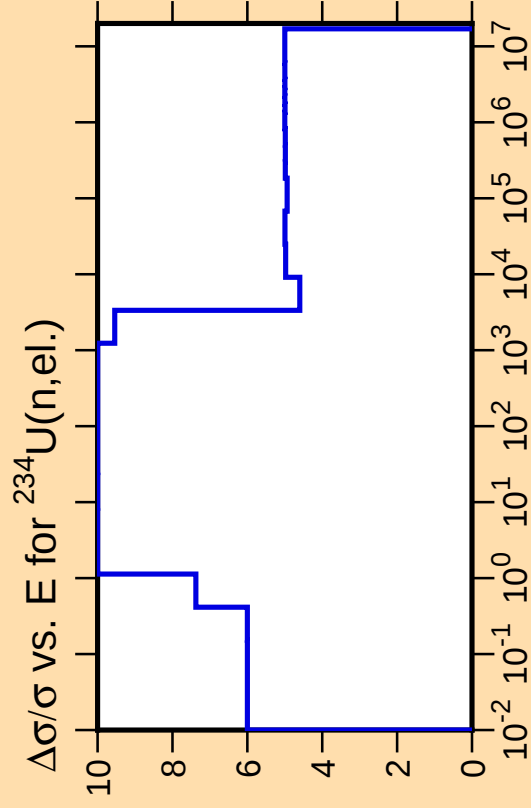


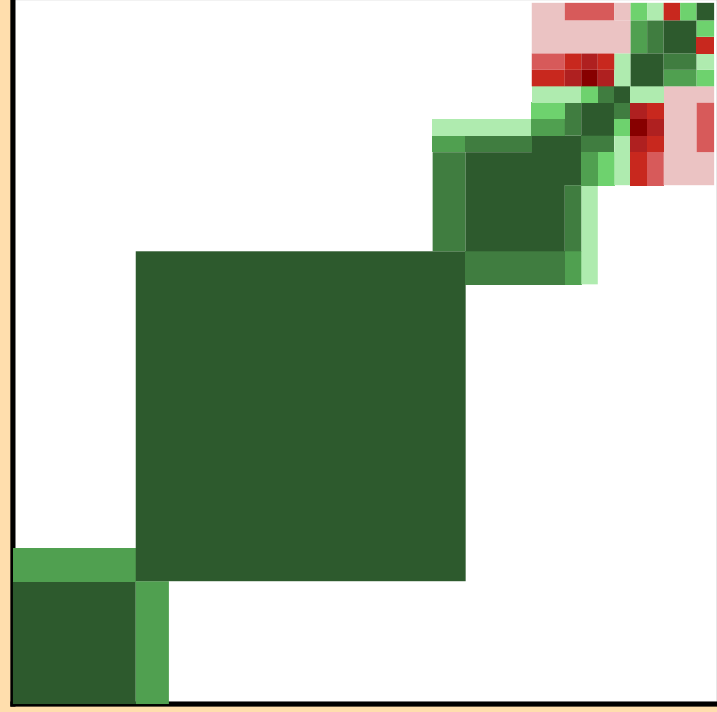

Ordinate scales are % relative standard deviation and barns.


Abscissa scales are energy (eV).

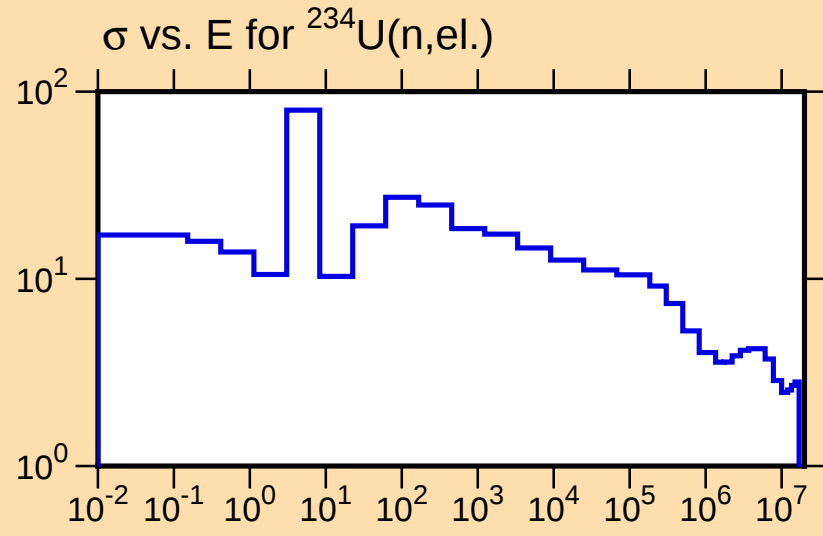

Correlation Matrix





$\Delta\sigma/\sigma$ vs. E for $^{234}\text{U}(\text{n,inel.})$

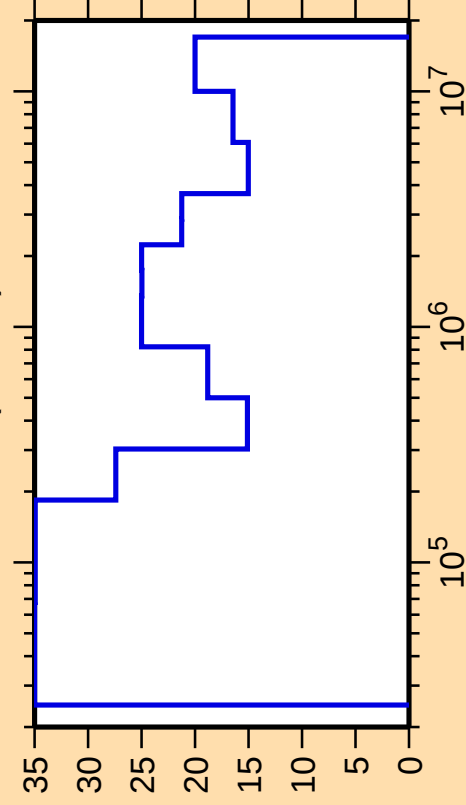


Ordinate scales are % relative standard deviation and barns.

Abscissa scales are energy (eV).


σ vs. E for $^{234}\text{U}(\text{n,inel.})$

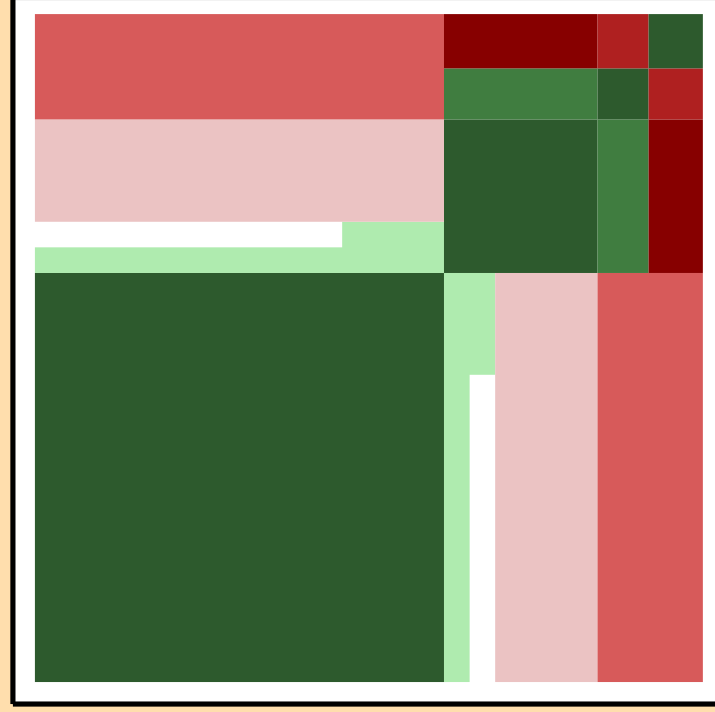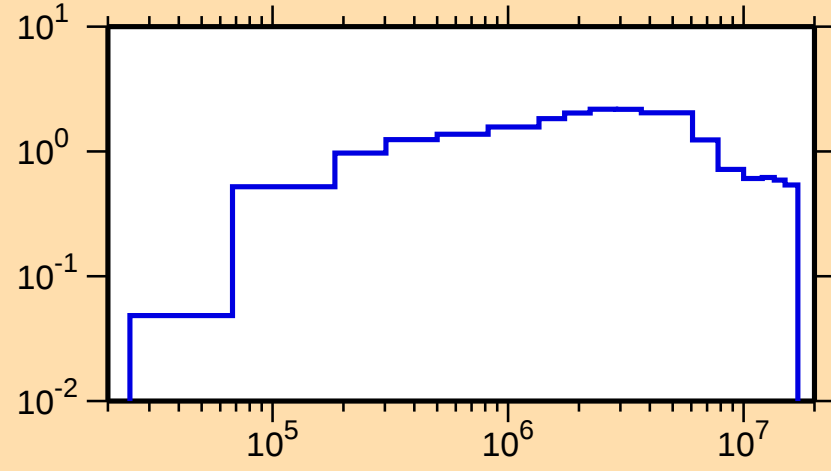

Correlation Matrix

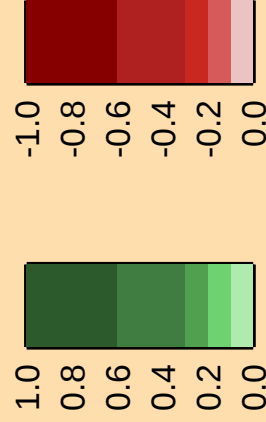



$\Delta\sigma/\sigma$ vs. E for $^{234}\text{U}(n,2n)$

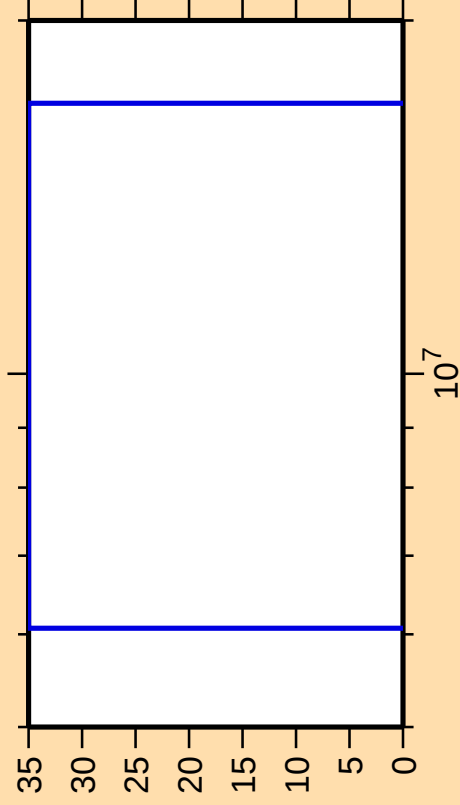


Ordinate scales are % relative standard deviation and barns.




Abscissa scales are energy (eV).

σ vs. E for $^{234}\text{U}(n,2n)$

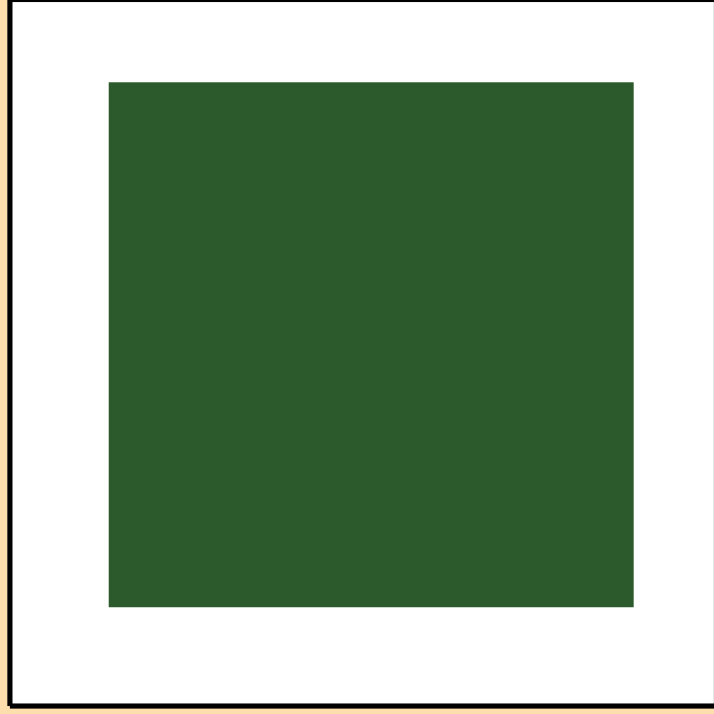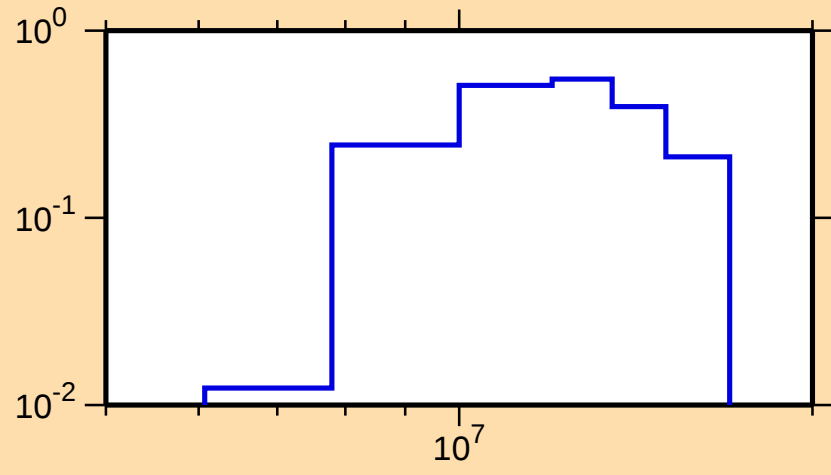


Correlation Matrix

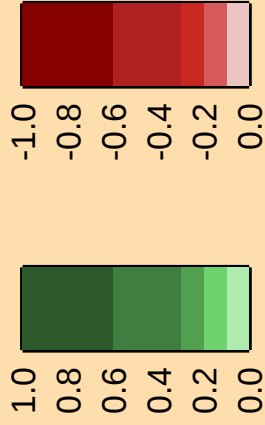


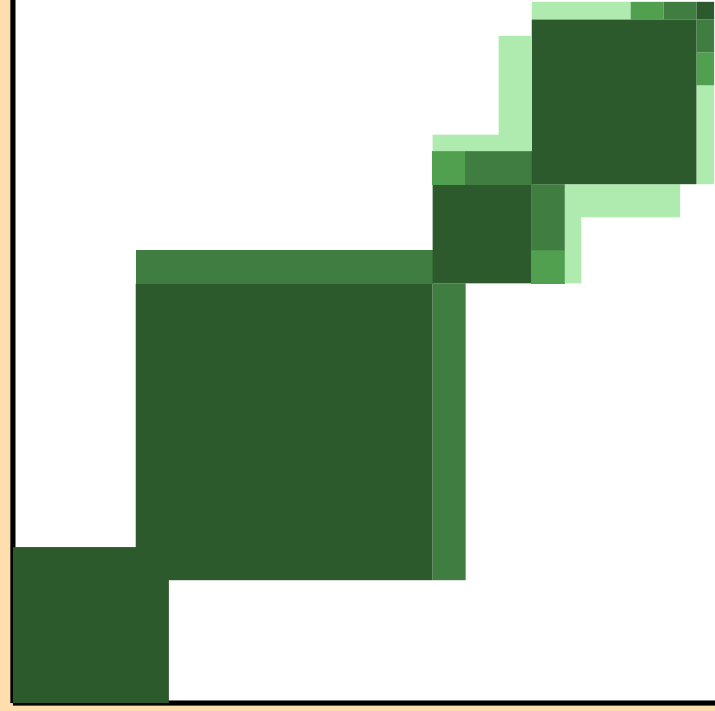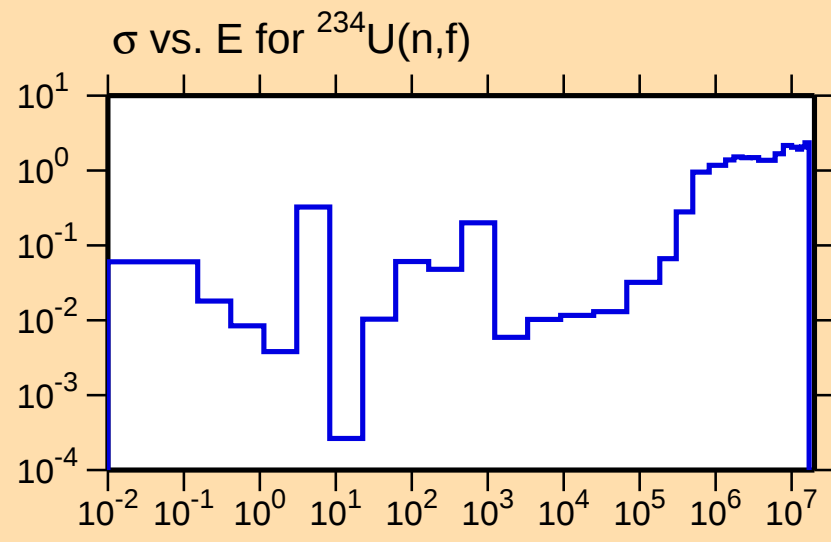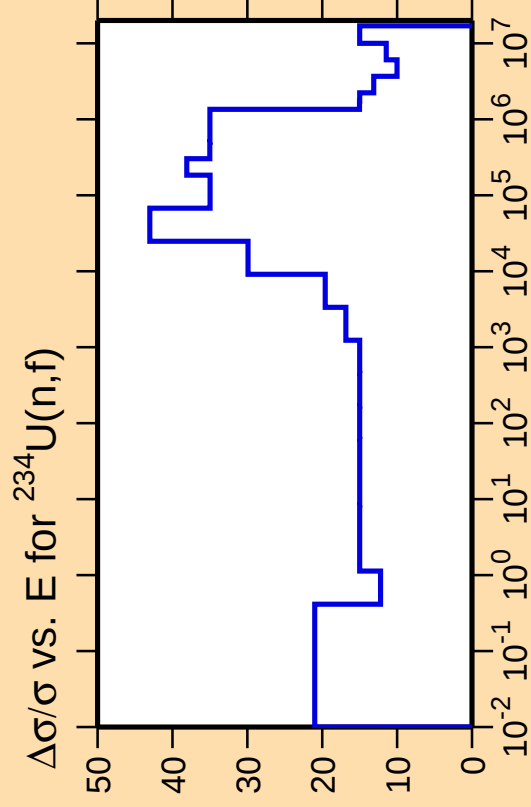

Correlation Matrix


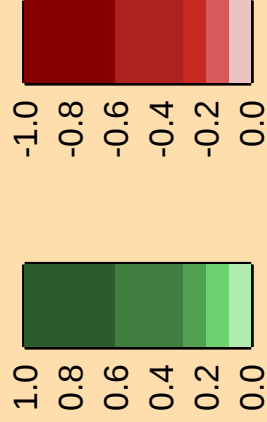


$\Delta\sigma/\sigma$ vs. E for $^{234}\text{U}(n,\gamma)$

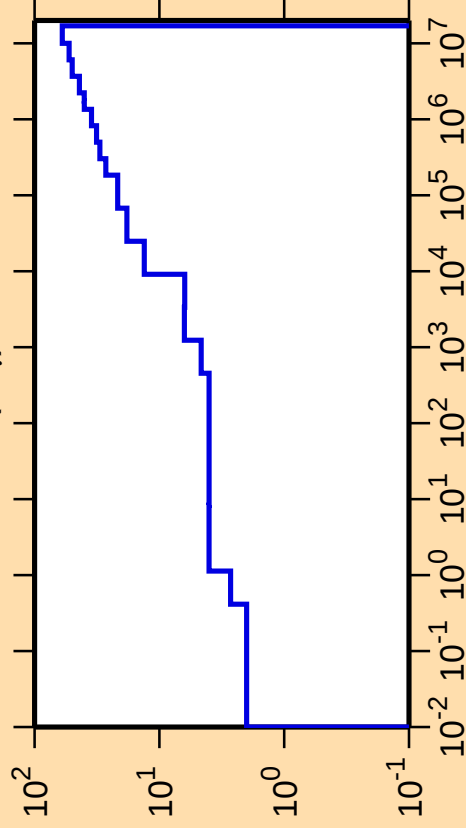

Ordinate scales are % relative standard deviation and barns.

Abscissa scales are energy (eV).

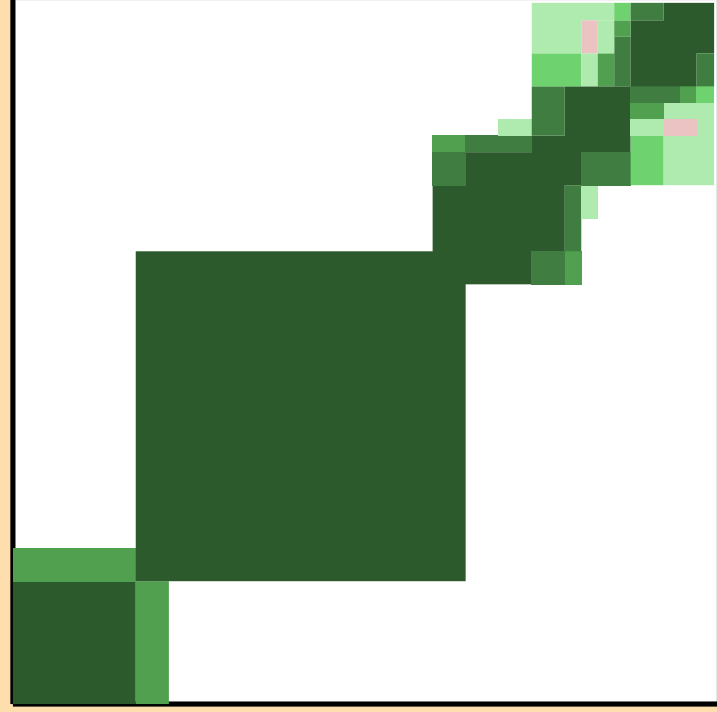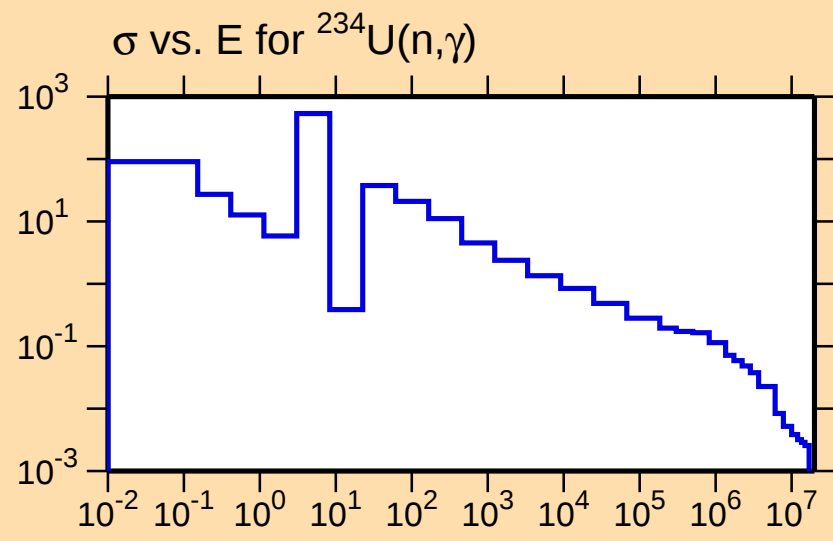

Correlation Matrix

